


FS390 Fixed image barcode scanner quick guide

Note

- ☞ A standard packing includes a scanner, a cable (USB, or RS232, or PS/2) and a CD (or a user manual).
- ☞ Accessories include a stand, a RS232 cable, and a 5V adaptor.
- ☞ Use a piece of dry and soft cloth when cleaning the scanner is in need.

Parts of the scanner

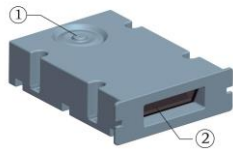

- ① Scan button
- ② Scan window

Reading techniques

1. Press and hold the Scan button, the scanner projects a green LED square which allows positioning the barcode within its field of view, and turns on the white LED for illumination.
2. When reading a barcode, the green LED square will be smaller when the scanner is closer to the barcode and larger when it is farther from the barcode. Please hold the scanner at an appropriate distance from the barcode, and center the green LED square on the barcode.
3. On a successful barcode reading, the scanner will beep once, and the green LED square and white LED will be turned off. Then the scanner transmits barcode message to the host.



Return default parameters and version information



Default value initialization



Firmware version list

Note: If the host cannot receive data normally because the input speed of the scanner is too fast, please scan the barcode below:



Programming instruction and example

Two programming modes have been provided as bellows:

➤ Single-scan setting


Scan the appropriate

Single-scan setting



Example: to set Flow control to be XON/XOFF.

➤ Multiple-scan setting

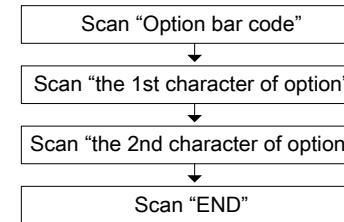

Example: to set Flow control to be XON/XOFF.