

# Cordless Scanner Quick Guide

## Notice


- A standard kit contains: a handheld unit, a cradle, a cable, and a quick guide.
- It is suggested to read the user manual in details before use.

## Parts of the handheld unit



- ① Scan window
- ② Trigger (Press to trigger / Long press 3 seconds to turn on)
- ③ Beeper
- ④ Successful decoding indicator (Green LED) / Communication fail indicator (Red LED) / Charging (Red/Green LED)


## Parts of the cradle

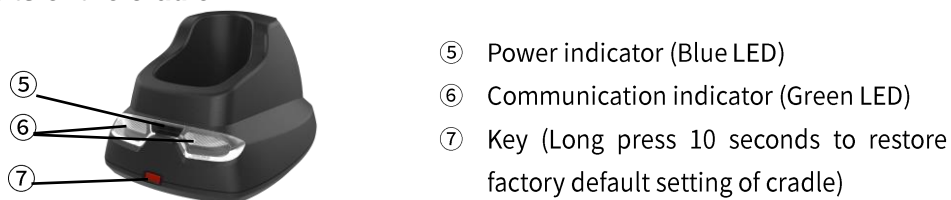

## Installation of cradle

1. Refer to the below pictures, connect the host with the scanner with different cables firstly, and then connect the adaptor to the power socket.
2. Ensure that all connections are secure. After a few seconds, if only the blue LED on the cradle is ON, it indicates the cradle is in normal working mode.

Note: If you use the PS/2 keyboard cable, you must restart the device after the connection is successful.

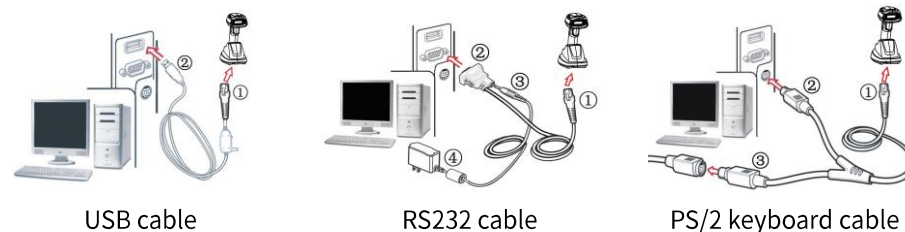


USB cable

RS232 cable

PS/2 keyboard cable

## Charge battery

- Please charge the battery before the first time of use. The Red LED on the handheld unit is turned on when the charging is in process. When the charging process completes, the Red LED is turned off, and the Green LED is turned on.
- Charging time: 6 hours for fully charged.
- You can charge the battery via a USB port on the device or an optional 5 VDC adapter.

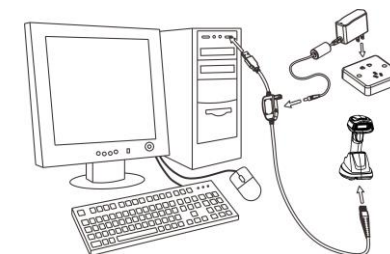

Note: The 5V power adapter is an optional accessory

## Indication of handheld unit for wireless data transmission

Successful	Beeper	Red LED	Vibration
Yes	Off	Off	Off
No	Two long beeps	Blinks 2 times, and then turns off	Short vibrates 2 times, and then turns off

## Turn off/on handheld unit

1. If you want to turn off the handheld unit, scan the barcode “%PWOFF” as shown right.
2. If you want to turn off the handheld unit via trigger key, please press and hold the trigger key, after the laser beam turns off, wait for another 5 seconds, the handheld unit will be turned off, then you can release the trigger key at this moment.
3. If you want to turn on the handheld unit again, please keep the trigger key being pressing for 3 seconds.



## Quick setting to wireless network

1. Make sure that both the handheld unit and the cradle are in normal working mode. Normally it means that only the blue LED on the cradle are ON.
2. Use the handheld unit to scan the right setting barcode. At the same time, the handheld terminal will make beep-beep-beep sound. The blue LED on the handheld unit will blink and the beeper will beep regularly to indicate that the handheld unit is ready to be positioned onto the cradle.
3. Firmly position the handheld unit onto the cradle within 15 seconds. A long beep and a short beep will be emitted to indicate a successful setting. Otherwise, three long beeps will be emitted to indicate a failed setting, and the red LED on the handheld will blinks 3 times.
4. If you want to disconnect, you can scan the barcode as shown below.



## Bluetooth mode



HID mode



Cradle mode\*



SPP mode



BLE mode

## Scan mode

Good-read off



%0401D00%

Momentary\*



%0401D01%

## Initialization settings and information display

Some parameters of handheld unit return All parameters of handheld unit return to

to default setting



%%DEF

Return to default setting of cradle



%BDEF

Cradle firmware version display



%BVER

Bluetooth MAC address display



%BMAC

default setting



%ADEF

Handheld unit firmware version display



%%VER

Bluetooth version display



%BTVER

Bluetooth name display



%BTN

## Vibration indication

Disable



%0507D00%

Enable\*



%0507D01%

## Beeper indication

Disable



%0503D00%

Enable\*



%0503D01%

## Volume of beeper

Low



%0505D00%

Middle



%0505D01%

High\*



%0505D02%

Note: The factory default settings are indicated with asterisks (\*).