

Barcode scanner quick guide

Notice

- A standard packing includes a scanner, a USB cable and a quick guide.
- Accessories include a stand, a RS232 cable, a 5V adaptor and a PS/2 cable.
- Use a piece of dry and soft cloth when cleaning the scanner.

Parts of the scanner



Installing the cable


1. Refer to the below pictures, connect the host with the scanner based on different cables.
2. Ensure that all connections are secure.
3. If installation is successful, the beeper will beep and LED will light.



Note: If you use the PS/2 keyboard cable, you must restart the host after the connection is successful.

Removing the cable

1. Find the release-hole.
2. Insert a thin wire into the hole and pull out the cable gently.

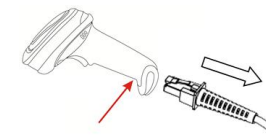

Programming instruction and example

- Single-scan setting

Scan the appropriate single-scan setting barcode.


Scan the appropriate

Single-scan setting



Example: To set Flow control to be XON/XOFF.

- Multiple-scan setting

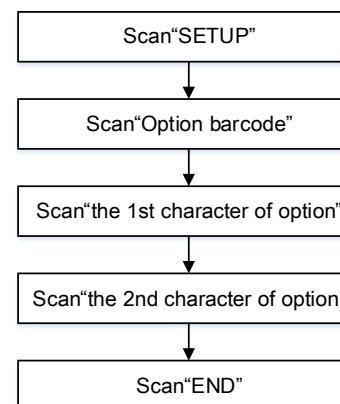

Example: To set Flow control to be XON/XOFF.

Default value initialization and Firmware version list



Default value initialization



Firmware version list